


Nozzle Duct Bushing Installation Instructions



To install bushing, cut or drill $9/16$ " hole in the air intake duct on the vehicle as near as possible to the throttle body. It is mandatory to install the nozzle on the engine side of any mass air flow sensors on the vehicle.

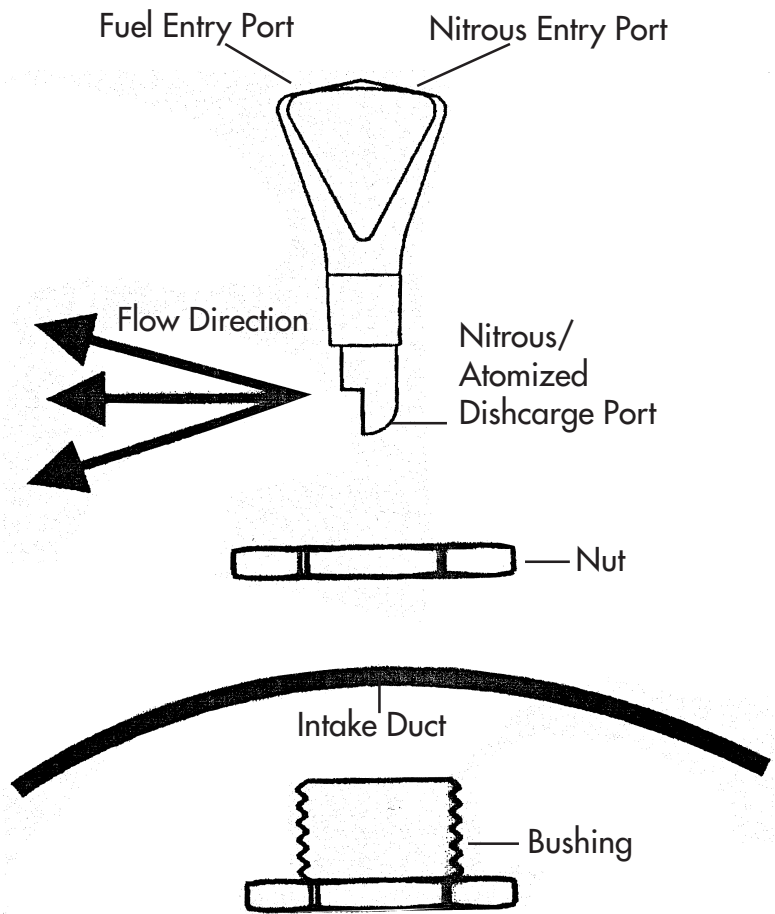

For further questions, please contact our technical department at (706) 864-8544.